

COMBUSTION CONTROL

The Combustion Engineers for Gas, Oil and LPG

Web : www.combustioncontrol.co.nz
Ph : 09 634 1610
266 Church St Onehunga 1643 Auckland

Email : sales@combustioncontrol.co.nz
Fax : 09 6345324
P O Box 13454 Onehunga

Ambirad
Ecoflam
Madas
Landis & Gyr
TPI
Black Teknigas
Anglo Nordic
Bromic
Auburn
SIT
Brahma
Ampy Email
Jeavons
Robert Shaw
Suntec
Fisher
Reznor
Dungs
Polidoro
I.Var Boilers
Maxon


Boiler Repairs
Boiler Rebuilds
Surveys
Oven Design
Oven Repair
Service Work
Installations
Pipe work

MADAS OPSO REGULATOR

Main Pressure Adjustment

OPSO Pressure Adjustment

OPSO Reset

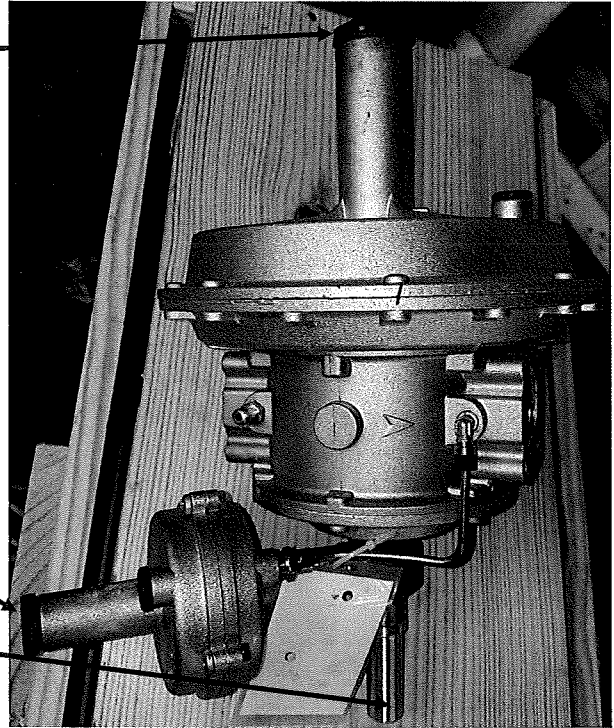

Installation Suggestions. Install straight "pipe" pieces on inlet and outlet with minimum length of 5 (five) times diameter.

To set OPSO pressure.

Adjust main pressure adjustment to suit required OPSO pressure (additional main springs maybe required).

Then reduce "OPSO Pressure adjustment" until OPSO trips. Reset OPSO by undoing bottom cap and reversing onto thread as a **PULL-DOWN** handle..

Reduce main pressure to desired working pressure. Test operation.

Please note ensure that the setting of the OPSO doesn't expose the downstream equipment to excessive pressure. During commissioning and normal operation

ALSO CHECK OUR FACEBOOK PAGE OR CONTACT US FOR YOUTUBE LINKS



www.combustioncontrol.co.nz